

INSTALLATION INSTRUCTIONS

FIRE DAMPER FDMB








FIRE damper type FDMB, is in all variants classified:


as El 120 ve, ho (i→o) S or El 90 ve, ho (i→o) S acc. EN 13501-3 and tested acc. EN 1366-2 and acc. EN 15650.

Examples of installation Round fire dampers (damper blade inside fire separating construction)


Installation in a solid wall construction

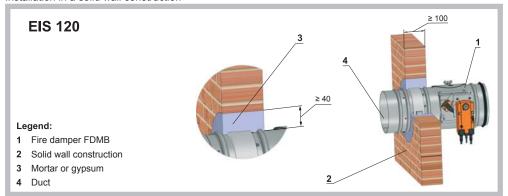

Installation in a solid wall construction

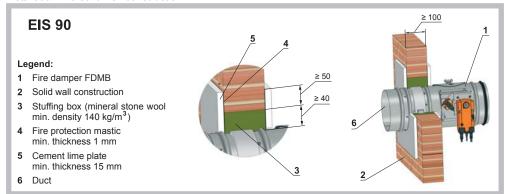


Installation in a solid wall construction (Weichschott system)

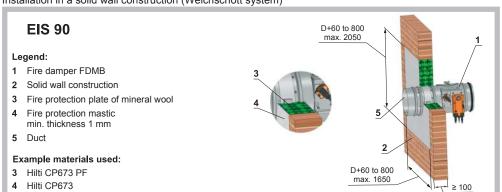





Installation in a gypsum wall construction

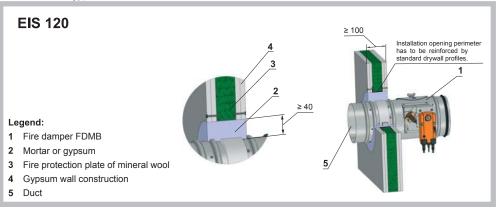

Installation in a gypsum wall construction

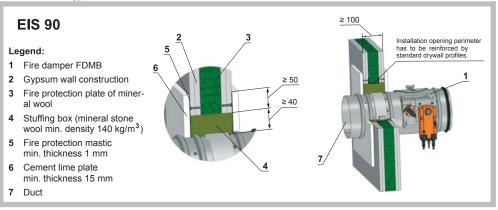


Installation in a gypsum wall construction (Weichschott system)

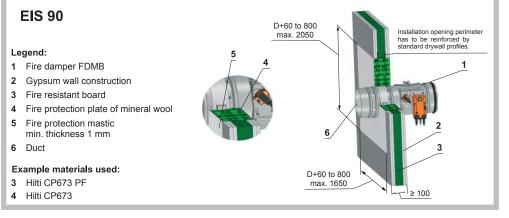





Installation in a solid ceiling construction

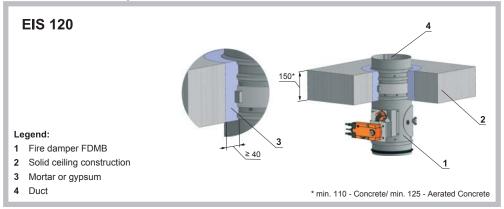

Installation in a solid ceiling construction

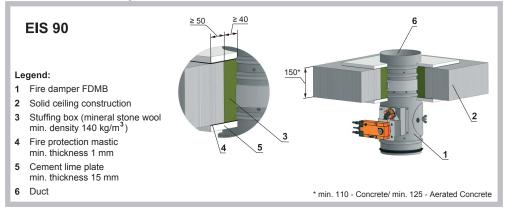


Installation in a solid ceiling construction (Weichschott system)

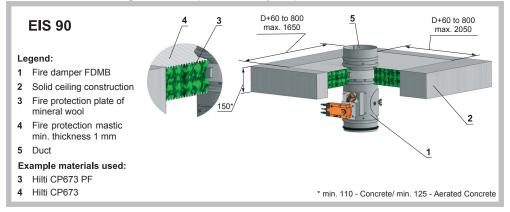




Examples of installation square fire dampers (damper blade inside fire separating construction)


Installation in a solid wall construction

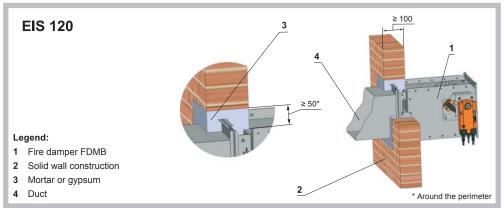

Installation in a solid wall construction

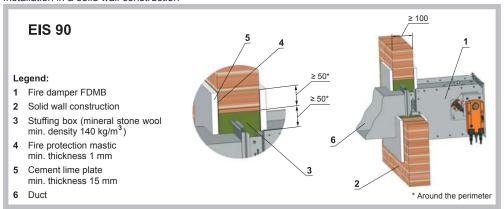


Installation in a solid wall construction (Weichschott system)

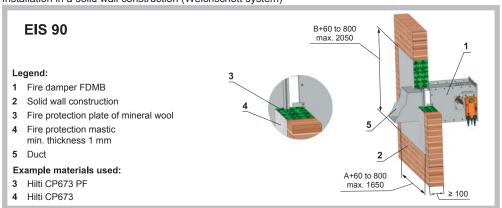





Installation in a gypsum wall construction

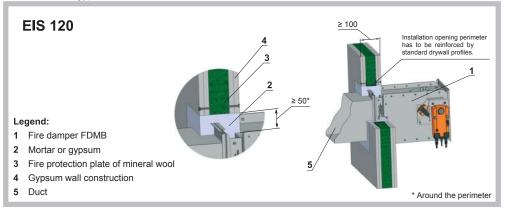

Installation in a gypsum wall construction

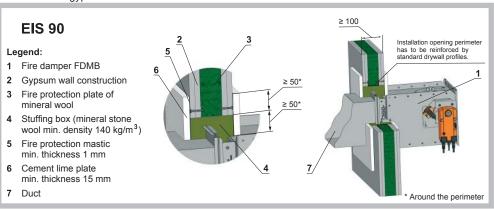


Installation in a gypsum wall construction (Weichschott system)

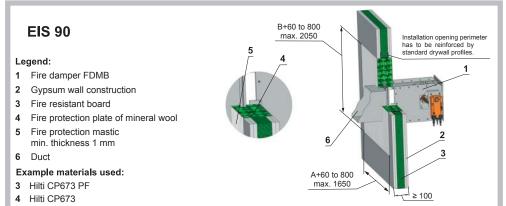





Installation in a solid ceiling construction

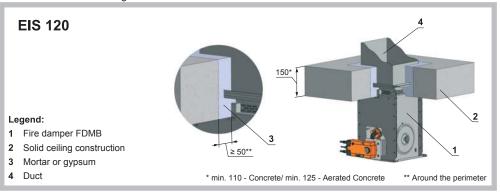

Installation in a solid ceiling construction

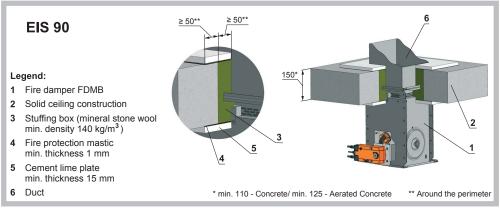


Installation in a solid ceiling construction (Weichschott system)

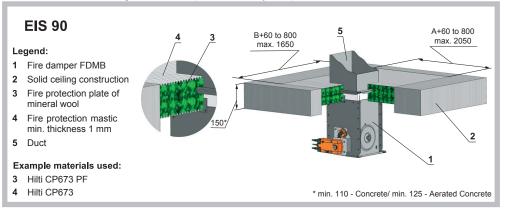




Examples of installation Round fire dampers (damper blade outside fire separating construction)

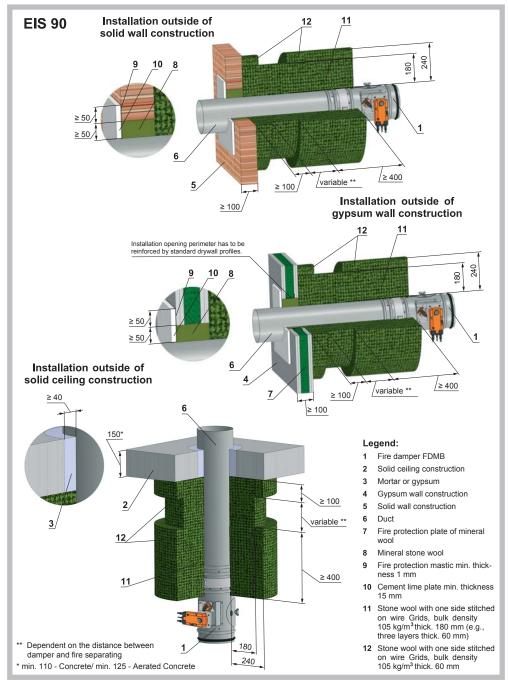



Examples of installation Square fire dampers (damper blade outside fire separating construction)

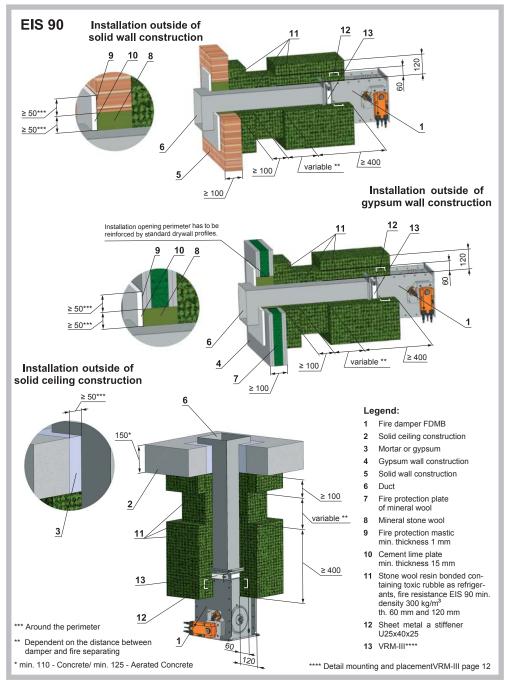



Examples of installation fire dampers in to the mounting frame in a solid wall construction


Installation frame E1 Installation frame E2 3 ≥ 100 ≥ 100 Installation frame R1, R2 Installation frame E4 ≥ 100 Installation frame R3, R4 Installation frame R5

Legend:

- 1 Fire damper FDMB
- 2 Installation frame
- 3 Solid wall construction




Examples of installation fire dampers in to the mounting frame in a gypsum wall construction

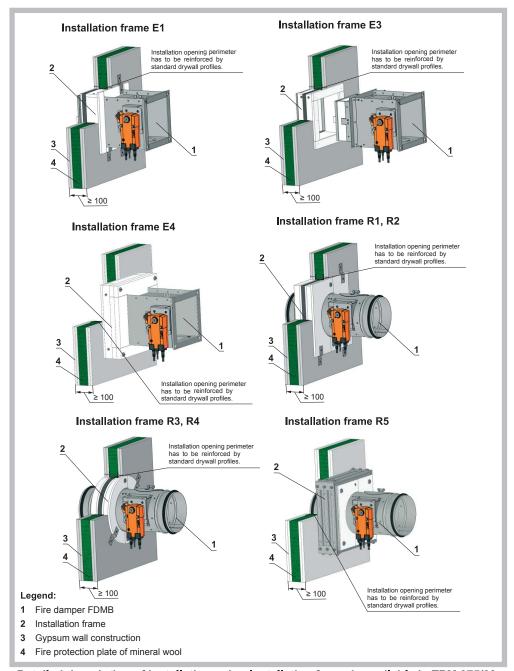

Detailed description of installation using Installation frame is available in TPM 075/09.




Examples of installation fire dampers in to the mounting frame in a solid ceiling construction

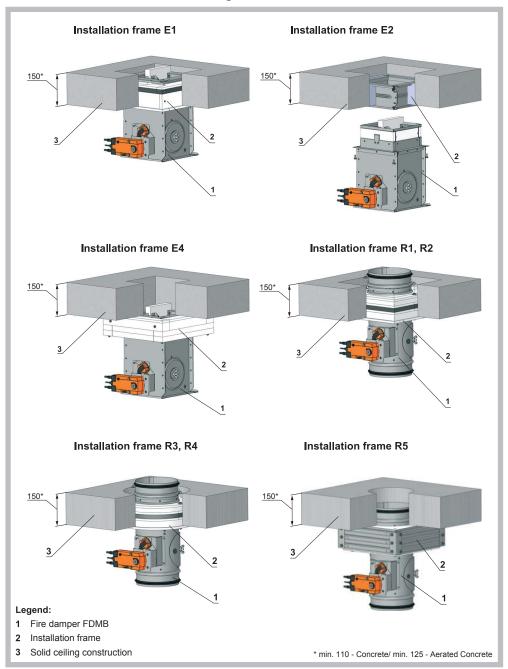




Reinforcement VRM-III fixing

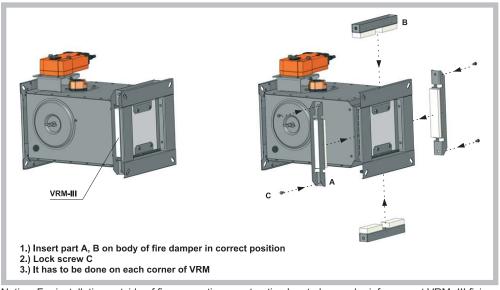


Notice: For installation outside of fire separating construction has to be used reinforcement VRM- III fixing.

Damper dimensions


Square damper - design manual and thermal

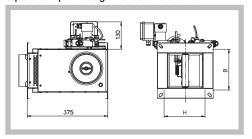


Square damper with actuating mechanism

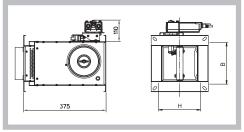

Round damper with actuating mechanism

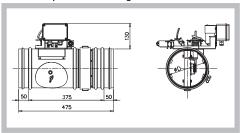

Round damper - design manual and thermal

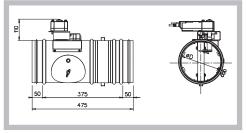


Detailed information on the size of the fire dampers are available in TPM 075/09.



Installation instructions

- 1. All fire dampers has to be closed during installation process.
- The control mechanism has to be protected (covered) against damage and pollution during installation process.
- 3. Min. gap for installation (installation opening) is 25 mm (circular dimension Ø D + 50 mm or square dimension AxB + 100 mm).
- Installation gap must be filled by approved material perfectly in all the installation space volume (installation gap).
- 5. The distance between the fire damper and the construction (wall, ceiling) must be minimum 75 mm according to EN 1366-2. In case that two or more dampers are supposed to be installed in one fire separating construction, the distance between the adjacent dampers must be at least 200 mm according to EN 1366-2 paragraph 13.5.
- 6. Installation openings

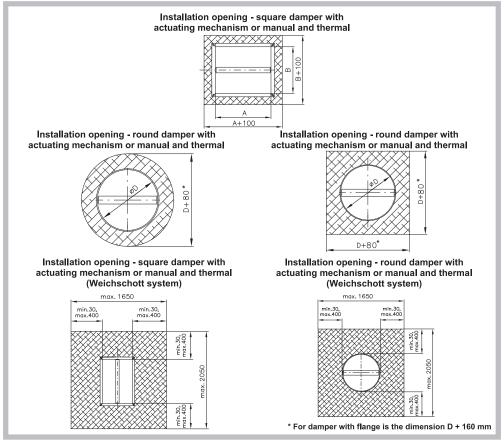


Notice

Fire dampers are suitable for installation in arbitrary position in vertical and horizontal passages of fire separating constructions. Damper assembly procedures must be done so as all load transfer from the fire separating constructions to the damper body is absolutely excluded. Back-to-back air-conditioning piping must be hung or supported so as all load transfer from the back-to-back piping to the damper is absolutely excluded.




7. The fire damper can be integrated into a solid or gypsum wall construction or into solid ceiling construction. Damper blade has to be inside of construction (labelled with min. or max. BUILD IN EDGE on the damper body). The fire damper can also be integrated outside the wall construction. Duct and the damper part between the wall construction and the damper blade (labelled with min. or max. BUILD IN EDGE on the protective covering) must be protected with fire-fighting insulation.

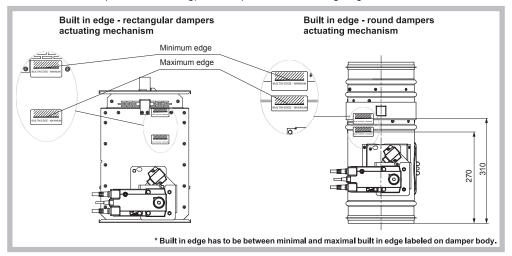


- All fire dampers has to be closed during installation process. The damper body should not be deformed
 in the course of bricking in. Once the damper is built in, its blade should not grind on the damper body
 during opening or closing.
- To provide needed access space to the control device, all other objects must be situated at least 350 mm from the control parts of the damper. Inspection hole must be accessible.

Placement of the openings in the wall

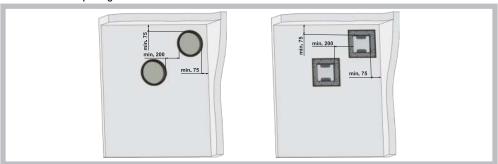


10. Damper blade overlaps

Overlaps of square dampers

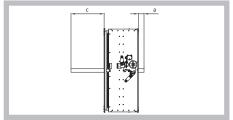


Overlaps of round dampers

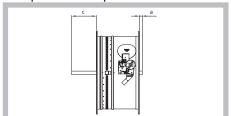

AxB



Overlaps of SPIRO dampers

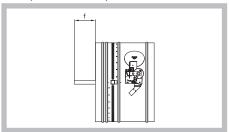


Notice: The blade of fire damper exceeds body of fire damper by the value "a" and "c" or "e" and "f". There has to be enough space in duct for blade rotation. Values "a" and "c" or "e" and "f" has to be respected when projecting related air-conditioning ducts.

DN	а	С	f
160	-	_	_
180	-	-	-
200	l -	-	-
225	-	13	_
250	-	25	-
280	-	40	-
315	-	58	8
355	-	78	28
400	-	100	50
450	-	125	75
500	-	150	100
560	-	180	130
630	24	215	165


AXB	а	С
Ax160	-	20
Ax180	-	30
Ax200	ı	40
Ax250	-	65
Ax280	-	80
Ax300	ı	90
Ax315	ı	98
Ax355	-	118
Ax400	ı	140
Ax450	ı	165
Ax500	-	190
Ax550	ı	215
Ax560	-	220
Ax600	ı	240
Ax630	-	255
Ax650	ı	265
Ax710	ı	295
Ax750	15	315
Ax800	40	340
Ax900	90	390
Ax1000	140	440

11. Flanges and Bracket

Flage of square damper

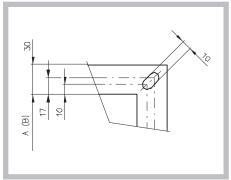


Mounting Bracket

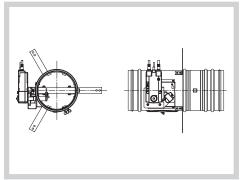


12. Electrical components, wiring diagrams

Actuating mechanism BELIMO BFL, BFN 230-T

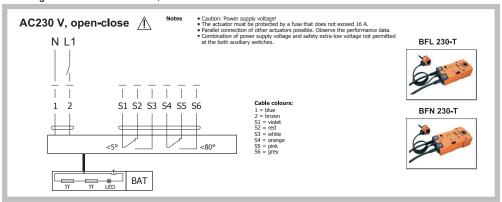





Actuating mechanism BELIMO BFL, BFN 24-T(-ST)

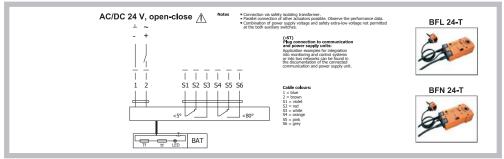


Actuating mechanism BELIMO BF 24-T(-ST), BF 230-T

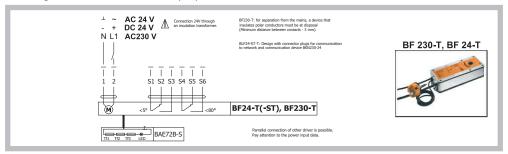


Actuating mechanism BELIMO BF 24TL-T-ST

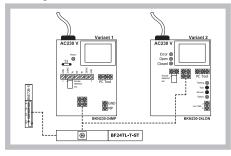


Electromagnet EM230

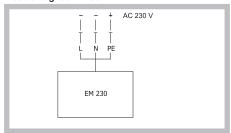

Terminal switch XCKN2118G-11

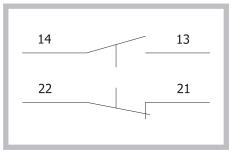

Electromagnet EM230 with pulse switch SIEM24

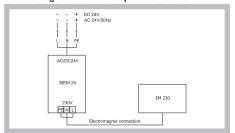

13. Before entering the dampers into operation after assembly and after sequential revisions, checks and functionality tests of all designs including operation of the electrical components must be done. After entering into operation, these revisions must be done according to requirement set by national regulations.



14. Before entering the dampers into operation after their assembly and by sequential checks, the following checks must be carried out for all designs.

Visual inspection of proper damper integration, inside damper area, damper blade, contact surfaces and silicon sealing.

Inspection hole disassembly: release the covering lid by turning the wing nut and while turning the lid right or left release it from the security belt. Then tilt the lid and remove it from its original position.

15. Before entering the dampers with manual control into operation after their assembly and by sequential checks, checks according 14. and following checks must be carried out.

Check of thermal protective fuse and closing mechanism.

Exert pressure on double arm initiation lever with a spring to release the control lever and check its displacement into the "CLOSED" position. Closing must be smart and the control lever must be firmly locked with a pawl. In case that the closing is not smart enough and the control lever is not locked with the pawl in the "CLOSED" position, higher pre-stretch of the closing spring must be set using a ratchet wheel.

Proper function of the thermal fuse can be checked when the fuse is removed from the starting mechanism. The initiation lever must be turned over and control lever is moved to position "CLOSED". If this is not possible, then the starting mechanism spring must be checked or the base plate must be replaced. The base plate is attached to the damper body with M5 screws.

Displacing the damper blade into "OPEN" position is done the following way: Release the pawl exerting pressure and return the control lever into the second outlaying position where the lever is hold by the initiation lever.

In case of the flap valve with an electromagnet check the control lever displacement into the "CLOSED" position after connecting to power supply.

16. Before entering the dampers with actuating mechanism into operation after their assembly and by sequential checks, checks according 14. and following checks must be carried out.

Check of blade displacement into the breakdown position "CLOSED" can be done after cutting off the actuating mechanism supply (e.g. by pressing the RESET button at the thermoelectrical starting mechanism BAE 72B-S or cutting off the supply from ELECTRICAL FIRE SIGNALISATION). Check of blade displacement back into the "OPEN" position can be done after restoration of power supply (e.g. By releasing the RESET button or restoration of supply from ELECTRICAL FIRE SIGNALISATION).

17. Manual operation

Without power supply, the damper can be operated manually and fixed in any required position. Release of the locking mechanism can be achieved manually or automatically by applying the supply voltage.

- 18. It is recommended to provide periodical checks, maintenance and service actions on Fire Equipment by Authorized persons schooled by Producer.
- 20. All effective safety standards and directives must be observed during fire damper assembly.



Material

- Damper bodies are supplied in the standard design made of galvanized plate without any other surface finish.
- 2. Damper blades are made of fire resistant asbestos free boards made of mineral fibres.
- 3. Damper controls are made of galvanized materials with no other surface finish.
- 4. Springs are galvanized.
- 5. Thermal protective fuses are made of sheet brass, thickness = 0.5 mm.
- 6. Fasteners is galvanized.



MANDÍK, a.s. Dobříšská 550 26724 Hostomice Czech Republic Tel.: +420 311 706 706

Fax: +420 311 584 810, 311 584 382

E-Mail: mandik@mandik.cz

www.mandik.com